

SELF-OPENING KITCHEN SHEARS

CODE

SELF-OPENING KITCHEN SCISSORS - PKS-1

DESCRIPTION



These self-opening kitchen scissors are sprung to automatically reopen after each cut.



HOW TO USE

Unlock the red safety catch. Gently squeeze the scissors to cut through food, packets etc. If required wash with warm soapy water and allow to dry and then squeeze handles together to relock to keep safe when not in use

KEY FEATURES

- Large comfortable handle
- Serrated blade to grip item being cut
- Spring to automatically reopen after each cut
- Safety catch to keep closed when not in use

RECOMMENDED FOR

	
Weak Grip	Poor Hand Control



RELATED PRODUCTS

PKT-CF - Easi-Grip® Carving Fork
PKT-CS - Easi-Grip® Cheese Slice
PKT-CK - Easi-Grip® Carving Knife
PKT-FK - Easi-Grip® General Purpose Knife

PKT-S - Easi-Grip® Spatula
PKT-G - Easi-Grip® Grater
PKT-BK - Easi-Grip® Bread Knife